XE192-500kW
Resistive Load Bank

Rentaload
Worldwide leader in load bank rental services

Standard Features

1. Digital meter with USB-Type B data port

2. Recessed control panel to protect controls

3. Voltage and temperature warning lamps

4. 400 amp camlock power connections

5. Lightweight aluminum body; Approximate weight: 1050 lbs

6. 120V auxiliary power receptacle

7. Quiet, high-speed cooling fans

8. Impact base with forklift pockets and swivel casters to eliminate shipping cages and packaging
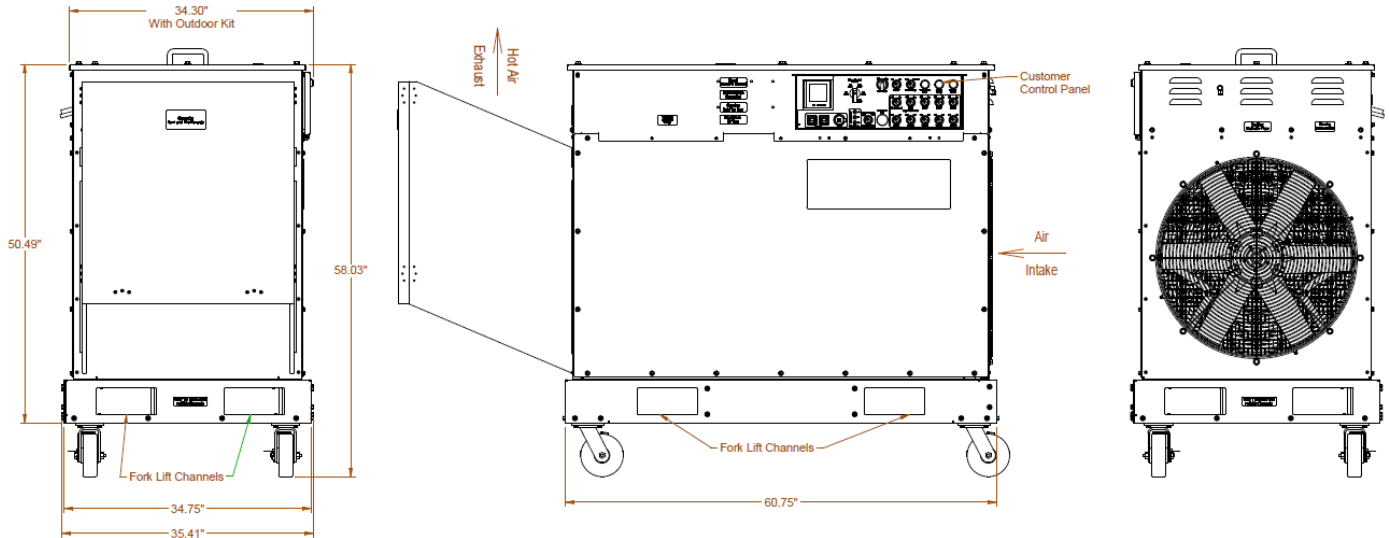
Applications

- Generator Maintenance

- Uninterrupted Power Supplies

- Data Centers

- Renewable Energy

Options and Services

- Cables, Tails (pin and lug)

- Tap Boxes (E&I and Starline)

- Optional Exhaust Scoop

- Delivery and Pick-up, Installation and Teardown

Rentaload provides a comprehensive array of load bank rental services to help run safer, smarter, and more sustainable operations. With over 50 years of experience, Rentaload is focused on efficiency, innovation, tailored solutions, and exceptional customer service to meet your needs.

The XE192-500kW load bank offers a continuous load at various voltages in a compact, lightweight, indoor enclosure. A digital meter allows users to measure power, voltage, current, and frequency while also logging data. A vertical discharge exhaust scoop is available as an additional option.

Power connections are easily made with Quick-Connect cam-locks, and if desired, external power may be used for blower and control power.

Overall Dimensions (61in x 36in x 62in)

Technical Ratings

Main Power				
Voltage (VAC)	Phase	Power (kW)*	Resolution (kW)	Line Current
480	3	500	5.00	601
240	3	500	5.00	1203
208	3	376	3.76	1042
240	1	250	2.50	1042
120	1	63	0.63	521
* kW output tolerance: +/- 5%				

Blower/Control Power				
Power	3 HP (2.24 kW) Max			
Voltage	Int/Ext	480 VAC	3 Phase	60 Hz
		240 VAC	3 Phase	60 Hz
		208 VAC	3 Phase	60 Hz

Software Features

- Data logging and monitoring of voltage, current, frequency, power factor, and total power
- Multiple alarm monitoring and blower control and status
- Remote or local operation of up to 100 load banks from a single laptop
- Available Control Modes: Individual, Zone (8 maximum), or All